


ILB IB 24 DI16 DO16

Inline Block IO Module for INTERBUS With 16 Digital Inputs and 16 Digital Outputs

AUTOMATIONWORX

Data Sheet 6882_en_03

© PHOENIX CONTACT - 03/2007

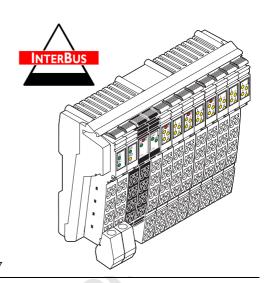

Description

The ILB IB 24 DI16 DO16 module is designed for use within an INTERBUS network. It is used to acquire and output digital signals.

INTERBUS Features

- Remote bus connection via Inline connector
- Transmission speed 500 kbps
- Diagnostic and status indicators

Input Features

- Connections for 16 digital sensors
- Connection of sensors in 2 and 3-wire technology
- Maximum permissible load current per sensor: 125 mA
- Maximum permissible load current from the sensor supply: 2.0 A
- Diagnostic and status indicators

Output Features

- Connections for 16 digital actuators
- Connection of actuators in 2 and 3-wire technology
- Nominal current per output: 0.5 A
- Total current of all outputs: 8 A
- Short-circuit and overload protected outputs
- Diagnostic and status indicators



Please refer to the "Mounting and Removing Inline Block IO Modules" application note (see "Ordering Data" on page 2).



Make sure you always use the latest documentation. It can be downloaded at www.download.phoenixcontact.com.

A conversion table is available on the Internet at www.download.phoenixcontact.com/general/7000 en 00.pdf.





Ordering Data

Product

Description	Туре	Order No.	Pcs./Pkt.
Inline Block IO module for INTERBUS with 16 digital inputs and 16 digital outputs	ILB IB 24 DI16 DO16	2862385	1

Accessories: Connectors as Replacement Item

Description	Туре	Order No.	Pcs./Pkt.
Shield connector for INTERBUS connection (color print)	IB IL SCN-6 SHIELD-CP	2863151	5
Connector for the supply (color print)	IB IL SCN-PWR IN-CP	2727637	10
Connector, with color print, for digital 4-channel or 16-channel Inline output terminals	IB IL SCN-12-OCP	2727624	10
Connector, with color print, for digital 4-channel or 16-channel Inline input terminals	IB IL SCN-12-ICP	2727611	10

Accessories: Other

Description	Туре	Order No.	Pcs./Pkt.
Recommended end clamp; placed both to the right and left of the module to	CLIPFIX 35-5	3022276	50
secure it on the DIN rail			

Documentation

Description	Туре	Order No.	Pcs./Pkt.
"Mounting and Removing Inline Block IO Modules" application note	AH ILB INSTALLATION	9014931	1
"INTERBUS Addressing" data sheet	DB GB IBS SYS ADDRESS	9000990	1
"Addressing of 16-Channel ILB Modules" application note	AH ILB 24 DI/DO 16 ADDRESS	9014962	1
"General Introduction to the INTERBUS System" user manual	IBS SYS INTRO G4 UM E	2745211	1



Technical Data

General Data	
Housing dimensions with connectors (width x height x depth)	156 mm x 55 mm x 141 mm
Weight	500 g (with connectors)
Operating mode	Process data mode with 1 word
Transmission speed	500 kbps
Type of sensor and actuator connection	2 and 3-wire technology

Housing Dimensions


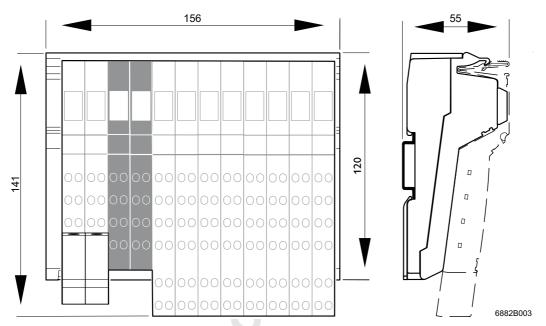


Figure 1 Housing dimensions of the module (dimensions in mm)

Ambient Conditions	
Regulations	Developed according to VDE 0160/EN 50178/IEC 62103, UL 508
Ambient temperature (operation)	-25°C to +60°C
Ambient temperature (storage/transport)	-25°C to +85°C
Humidity (operation/storage/transport)	10% to 95% according to EN 61131-2
Air pressure (operation)	80 kPa to 108 kPa (up to 2000 m above sea level)
Air pressure (storage/transport)	66 kPa to 108 kPa (up to 3500 m above sea level)
Degree of protection according to IEC 60529	IP20
Class of protection	Class 3 according to VDE 0106/IEC 60536
Air and creepage distances	According to DIN VDE 0110/IEC 60664, IEC 60664A, DIN VDE 0160/ EN 50178/IEC 62103
Housing material	Plastic, PVC-free, PBT, self-extinguishing (V0)
Pollution degree according to EN 60664-1/IEC 60664-1, EN 61131-2/IEC 61131-2	2; condensation not permitted during operation
Surge voltage class	II

 

Online components.com
THE ONLINE DISTRIBUTOR OF ELECTRONIC COMPONENTS

Electrical Isolation/Isolation of	the Voltage Areas	
Test Distance		Test Voltage
Incoming remote bus / outgoing remote bus	3	500 V AC, 50 Hz, 1 min
Incoming remote bus / I/O		500 V AC, 50 Hz, 1 min
Incoming remote bus / functional earth grou	und	500 V AC, 50 Hz, 1 min
Outgoing remote bus / I/O		500 V AC, 50 Hz, 1 min
Outgoing remote bus / functional earth grou	und	500 V AC, 50 Hz, 1 min
I/O / functional earth ground		500 V AC, 50 Hz, 1 min
Mechanical Requirements		
Vibration test, sinusoidal vibrations accordi EN 60068-2-6/IEC 60068-2-6	ng to	5g load, 2.5 hours in each space direction
Shock test according to EN 60068-2-27/IEO	C 60068-2-27	25g load for 11 ms, half sinusoidal wave, 3 shocks in each space direction and orientation
Broadband noise according to EN 60068-2	-64/IEC 60068-2-64	0.78g load, 2.5 hours in each space direction
Conformance With EMC Directi	ve 89/336/EEC	
Noise Immunity Test According	to FN 61000-6-2	
Electrostatic discharge (ESD)	EN 61000-4-2	Criterion B
Electrostatic disortarge (ESS)	IEC 61000-4-2	6 kV contact discharge 8 kV air discharge
Electromagnetic fields	EN 61000-4-3	Criterion A
-	IEC 61000-4-3	Field strength: 10 V/m
Fast transients (burst)	EN 61000-4-4/	Criterion B
	IEC 61000-4-4	Remote bus: 2 kV Power supply: 2 kV I/O cables: 2 kV
		Criterion A
		All interfaces: 1 kV
Surge voltage	EN 61000-4-5	Criterion B
	IEC 61000-4-5	DC supply lines: ±0.5 kV/±1.0 kV (symmetrical/asymmetrical)
		Signal cables: ±0.5 kV/±0.5 kV (symmetrical/asymmetrical)
Conducted interference	EN 61000-4-6	Criterion A
	IEC 61000-4-6	Test voltage 10 V
Noise Emission Test According	to EN 61000-6-4	
Noise emission of housing	EN 55022	Class B (residential)
Interface: INTERBUS		
Incoming remote bus		Copper cable (RS-422), connected with Inline shield connector; supply electrically isolated; shielding connected with a capacitor to functional earth ground
Outgoing remote bus		Copper cable (RS-422), connected with Inline shield connector; supply electrically isolated; shielding directly connected to functional earth ground
Recommended cable lengths		See INTERBUS system data in the IBS SYS INTRO G4 UM E user manual



Nominal value	24 V DC
Tolerance	-15%/+20% according to EN 61131-2
Ripple	±5% according to EN 61131-2
Permissible range	19.2 V DC to 30.0 V DC
Current consumption at U _L	80 mA
Current consumption at U _S	2 A
Current consumption at U _{A1} and U _{A2}	2 x 4 A
Safety equipment for communications power	Surge protection and protection against polarity reversal
Safety equipment for the sensor supply	Surge, overload and short-circuit protection
Safety equipment for the actuator supply	Surge protection
Connection	Via power connectors
Digital Outputs	
Number	16
Connection method for actuators	2 and 3-wire technology
Nominal output voltage U _{OUT}	24 V DC
Differential voltage at I _{nom}	≤ 1 V
Nominal current I _{nom} per channel	0.5 A
Total current	2 x 4 A
Protection	Short-circuit and overload protection
Nominal load	
Ohmic	48 Ω/12 W
Lamp	12 W
Inductive	12 VA (1.2 H, 50 Ω)
Switching frequency with nominal inductive load	0.5 Hz (1.2 H, 50 Ω), maximum
Overload response	Auto restart
Response with inductive overload	Output may be damaged
Reverse voltage protection against short pulses	Protected against reverse voltages
Resistance to permanently applied reverse voltages	Protected against reverse voltages, permissible current 2 A, maximum
Validity of output data after connecting the 24 V supply voltage (power up)	5 ms, typical
Response upon power down	The output follows the supply voltage without delay.

-41.0 V

1 J, maximum

0.7 A, minimum

Integrated free running circuit in the output chip



One-time unsolicited energy

Protective circuit type

Overcurrent shutdown

Limitation of the voltage induced on circuit interruption

Maximum output current when switched off

When not loaded, a voltage can be measured even at an output that is not set.



Digital Inputs	
Number	16
Connection method for sensors	2 and 3-wire technology
Input design	According to EN 61131-2 Type 1
Definition of switching thresholds	
Maximum low-level voltage	U_{Lmax} < 5 V
Minimum high-level voltage	U _{Hmin} > 15 V
Common potentials	Sensor supply U _S , ground
Nominal input voltage U _{IN}	24 V DC
Permissible range	-30 V < U _{IN} < +30 V DC
Nominal input current for U _{IN}	5 mA, typical
Current flow	Linear in the range 1 V < U _{IN} < 30 V
Delay time	≤ 500 μs
Permissible cable length to the sensor	100 m
Use of AC sensors	AC sensors in the voltage range < U _{IN} are limited in application

Power Dissipation

Formula to Calculate the Power Dissipation of the Electronics

	VA (1)	- · - -
n m	Where	
$P_{\text{TOT}} = 1.92 \text{ W} + I_s^2 \times 0.06 \Omega + \sum_{i=1}^{\infty} (0.04 \text{ W} + I_{\text{Li}}^2 \times 0.28 \Omega) + \sum_{i=1}^{\infty} 0.125 \text{ W}$	P_{TOT}	Total power dissipation of the module
I=1 J=1	Is	Current from the sensor supply
	i	Index
	n	Number of set outputs (n = 1 to 16)
	I_{Li}	Load current of the output i
	j	Index
	m	Number of set inputs (m = 1 to 16)

Limitation of Simultaneity, Derating


No limitation of simultaneity, no derating

Approvals

For the latest approvals, please visit <u>www.download.phoenixcontact.com</u>.



Internal Circuit Diagram

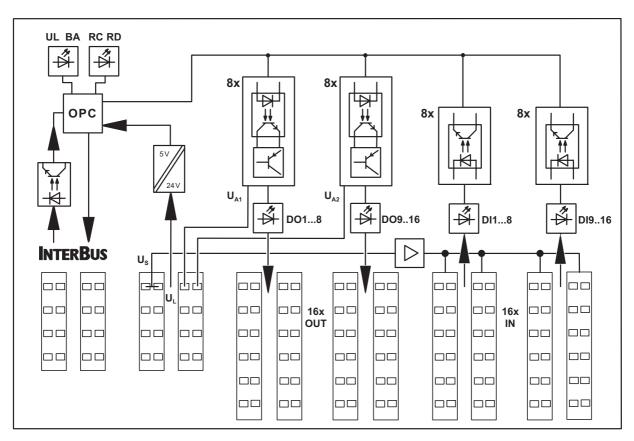

6882B002

Figure 2 Internal wiring of the terminal points

Key:

LED

Protocol chip (bus logic)

Power supply unit with electrical isolation

Optocoupler

Short-circuit-proof output

Short-circuit-proof sensor supply



Local Diagnostic and Status Indicators

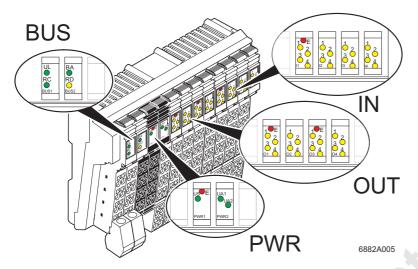


Figure 3 Diagnostic and status indicators of the ILB IB 24 DI16 DO16 module

Designation	Color	Meaning
BUS		
UL	Green	Communications power
RC	Green	Remote bus cable check
BA	Green	Bus active
RD	Yellow	Outgoing remote bus disabled
PWR		
E	Red	Undervoltage sensor supply U _S
US	Green	Sensor supply
UA1	Green	Actuator supply 1 (connector 5 and connector 6 for actuators)
UA2	Green	Actuator supply 2 (connector 7 and connector 8 for actuators)
OUT		
E	Red	Short circuit or overload at one of the outputs
1 - 4	Yellow	Status indicators of the outputs
IN		
E	Red	Short circuit or overload of the sensor supply
1 - 4	Yellow	Status indicators of the inputs



If the error LED (E) of a group of eight outputs lights up (e.g., connector 5 and connector 6), this indicates that a short circuit or overload is present at one or more of the outputs in this group.



Connecting INTERBUS, the Supply, Actuators, and Sensors

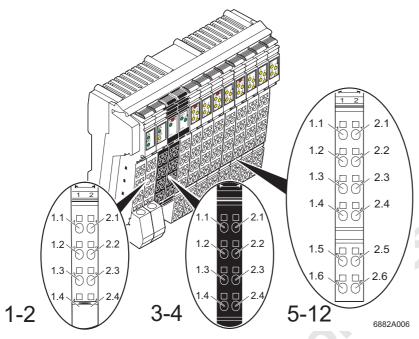


Figure 4 Terminal point assignment of the connectors

Terminal Point Assignment of INTERBUS Connectors (Connectors 1 and 2 in Figure 4)

Terminal Point	Assignment	Remark/Wire Color in the INTERBUS Standard Cable		
Connector 1 (BU	Connector 1 (BUS 1) Incoming Remote Bus			
1.1	DO1	Receive	Green	
2.1	DO1	Receive	Yellow	
1.2	DI1	Transmit	Pink	
2.2	DI1	Transmit	Gray	
1.3	F-GND	Reference potential	Brown	
2.3			Not used	
1.4, 2.4	Shield	Shield potential is connected with a capacitor to functional earth ground (FE) of the potential jumper.		
Connector 2 (BU	Connector 2 (BUS 2) Outgoing Remote Bus			
1.1	DO2	Transmit	Green	
2.1	DO2	Transmit	Yellow	
1.2	DI2	Receive	Pink	
2.2	DI2	Receive	Gray	
1.3	R-GND	Reference potential	Brown	
2.3			Not used	
1.4, 2.4	Shield	Shield potential is connected directly to functional earth ground (FE) of the potential jumper.		



Terminal Point Assignment of Power Connectors (Connectors 3 and 4 in Figure 4 on page 9)

Terminal Point	Assignment						
Connector 3 (PWR 1)							
1.1, 2.1	24 V sensor supply U _S						
1.2, 2.2	24 V communications power U _L						
1.3, 2.3	GND						
1.2, 2.4	FE						
Connector 4 (PV	VR 2)						
1.1, 2.1	24 V actuator supply U _{A1} /U _{A2}						
1.2, 2.2	24 V communications power U _L						
1.3, 2.3	GND						
1.4, 2.4	FE						



The terminal points can have a total current of 8 A per terminal point. The maximum current carrying capacity of 8 A must not be exceeded. If the total output current in your application is > 8 A, supply the module via a minimum of two terminal points connected in parallel.



The supply points have the same ground potential. All ground supplies on a module are electrically connected with one another. The communications power is also electrically connected via all contacts. In this way, it can supply all potentials with just one supply without the need for additional terminals, see "Connection example" on page 11.

Terminal Point Assignment of Output Connectors (Connectors 5 to 8 in Figure 4 on page 9)

Terminal Point	t		Assignment	
Connector 5 (O1)	Connector 6 (O2)	Connector 7 (O3)	Connector 8 (O4)	
1.1, 2.1	1.1, 2.1	1.1, 2.1	1.1, 2.1	Signal output (OUT)
1.2, 2.2	1.2, 2.2	1.2, 2.2	1.2, 2.2	Ground contact (GND) for 2 and 3-wire termination
1.3, 2.3	1.3, 2.3	1.3, 2.3	1.3, 2.3	FE connection for 3-wire termination
1.4, 2.4	1.4, 2.4	1.4, 2.4	1.4, 2.4	Signal output (OUT)
1.5, 2.5	1.5, 2.5	1.5, 2.5	1.5, 2.5	Ground contact (GND) for 2 and 3-wire termination
1.6, 2.6	1.6, 2.6	1.6, 2.6	1.6, 2.6	FE connection for 3-wire termination

Terminal Point Assignment of Input Connectors (Connectors 9 to 12 in Figure 4 on page 9)

Terminal Point			Assignment	
Connector 9 (I1)	Connector 10 (I2)	Connector 11 (I3)	Connector 12 (I4)	
1.1, 2.1	1.1, 2.1	1.1, 2.1	1.1, 2.1	Signal input (IN)
1.2, 2.2	1.2, 2.2	1.2, 2.2	1.2, 2.2	Sensor supply for 2 and 3-wire termination
1.3, 2.3	1.3, 2.3	1.3, 2.3	1.3, 2.3	Ground contact (GND) for 3-wire termination
1.4, 2.4	1.4, 2.4	1.4, 2.4	1.4, 2.4	Signal input (IN)
1.5, 2.5	1.5, 2.5	1.5, 2.5	1.5, 2.5	Sensor supply for 2 and 3-wire termination
1.6, 2.6	1.6, 2.6	1.6, 2.6	1.6, 2.6	Ground contact (GND) for 3-wire termination



Connection Example

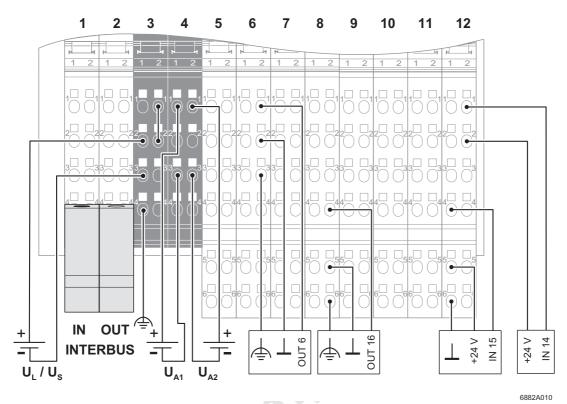


Figure 5 Connection example



The numbers above the module illustration identify the connector slots.



When connecting the sensors and actuators, observe the assignment of the terminal points to the process data (see page 12).



The module has an FE spring (metal clip) on the bottom of the electronics base. This spring creates an electrical connection to the DIN rail. Use grounding terminals to connect the DIN rail to protective earth ground. The module is grounded when it is snapped onto the DIN rail.

To ensure reliable functional earth grounding of the module even when the DIN rail is dirty or the metal clip is damaged, Phoenix Contact also recommends grounding the module via one of the FE terminal points.

Programming Data

ID code	03 _{hex} (03 _{dec})
Length code	01 _{hex}
Process data channel	16 bits
Input address area	1 word
Output address area	1 word
Parameter channel (PCP)	0 words
Register length (bus)	1 word



Process Data



For the assignment of the illustrated (byte.bit) view to your control or computer system, please refer to the DB GB IBS SYS ADDRESS data sheet.

Please refer to the application note for addressing 16-channel ILB modules.

The documentation can be downloaded at www.download.phoenixcontact.com.

Assignment of Terminal Points to the OUT Process Data Word (Slots 5 to 8)

(Word.bit) view	Word	Word 0															
	Bit	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
(Byte.bit) view	Byte				Byt	te 0				Byte 1							
	Bit	7	6	5	4	3	2	1	0	7	6	5	4	3	2	1	0
Module	Slot	6 (O2)				5 (O1)			8 (O4)				7 (O3)				
	Terminal point (signal)	2.4	1.4	2.1	1.1	2.4	1.4	2.1	1.1	2.4	1.4	2.1	1.1	2.4	1.4	2.1	1.1
	Terminal point (GND)	2.5	1.5	2.2	1.2	2.5	1.5	2.2	1.2	2.5	1.5	2.2	1.2	2.5	1.5	2.2	1.2
	Terminal point FE	2.6	1.6	2.3	1.3	2.6	1.6	2.3	1.3	2.6	1.6	2.3	1.3	2.6	1.6	2.3	1.3
Status indicator	Slot	6 (O2)		5 (O1)			6	8 (O4)				7 (O3)					
	LED	4	3	2	1	4	3	2	1	4	3	2	1	4	3	2	1

Assignment of Terminal Points to the IN Process Data Word (Slots 9 to 12)

(Word.bit) view	Word	Word 0																
	Bit	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0	
(Byte.bit) view	Byte				Byt	te 0				Byte 1								
	Bit	7	6	5	4	3	2	1	0	7	6	5	4	3	2	1	0	
Module	Slot	10 (I2)				9 (I1)				12 (I4)				11 (I3)				
	Terminal point (signal)	2.4	1.4	2.1	1.1	2.4	1.4	2.1	1.1	2.4	1.4	2.1	1.1	2.4	1.4	2.1	1.1	
	Terminal point (+24 V)	2.5	1.5	2.2	1.2	2.5	1.5	2.2	1.2	2.5	1.5	2.2	1.2	2.5	1.5	2.2	1.2	
	Terminal point (GND)	2.6	1.6	2.3	1.3	2.6	1.6	2.3	1.3	2.6	1.6	2.3	1.3	2.6	1.6	2.3	1.3	
Status indicator	Slot	10 (I2)		9 (I1)		12 (I4)				11 (I3)								
	LED	4	3	2	1	4	3	2	1	4	3	2	1	4	3	2	1	

Diagnostics

Error Table With Diagnostic Data and Status Indicators

Error Type	Diagnostic Data	Status Indicators
Sensor voltage U _S too low	I/O error message	US (PWR) LED is off
-		E (PWR) LED is red
Short circuit of a sensor supply	I/O error message	E (IN) LED of the sensor supply is red
Actuator supply U _{A1} or U _{A2} too low	No response	UA1 and UA2 LEDs are off
Short circuit of a digital output	I/O error message	E (OUT) LED of the affected output group is red

© PHOENIX CONTACT 03/2007